CANWEST
Telephone Company Corp

TDA Time & Date / Speed Dials / Extension Name Changes

KX-TDA30
KX-TDA100
KX-TDA200
KX-TDA600

System Time
Change

System Speed
Dial Entry

Extension
Name Change

Note:
System Programming must be done from an extension on the system that has programming permission.
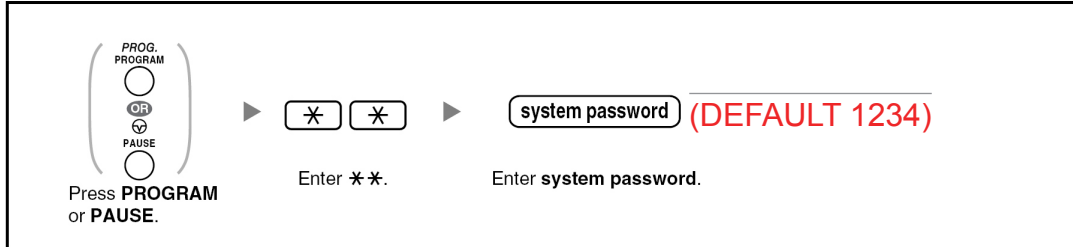Programming must also be done from one of the following models:
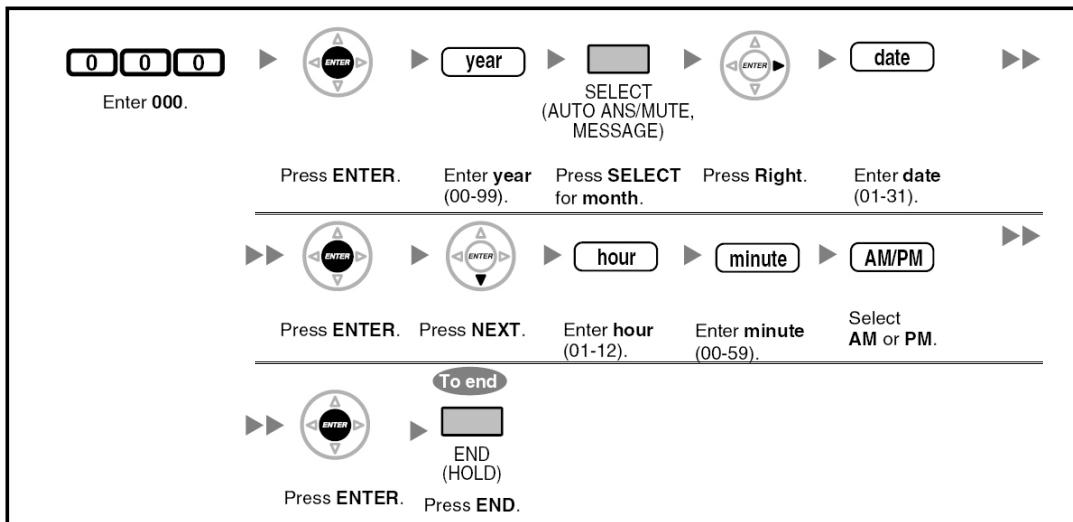KX-T7630/KX-T7633/KX-T7636

System Time / Date Change

(With the handset down and the phone idle)

Step 1 - Enter Programming Mode

Press **PROGRAM** or **PAUSE**.

Enter ✱✱.

system password (DEFAULT 1234)

Enter **system password**.

Step 2

Enter **000**.

Press **ENTER**.

Enter **year** (00-99).

Press **SELECT** for **month**.

SELECT (AUTO ANS/MUTE, MESSAGE)

Press **Right**.

Enter **date** (01-31).

Press **ENTER**.

Press **NEXT**.

Enter **hour** (01-12).

Enter **minute** (00-59).

Select **AM** or **PM**.

Press **ENTER**.
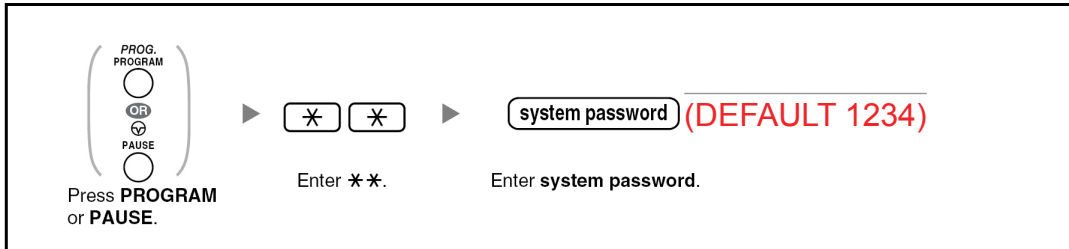
To end

END (HOLD)

Press **END**.

Step 3 - Exit Programming (Lift Phone Handset and Hangup)

System Speed Dials

(With the handset down and the phone idle)

Step 1 - Enter Programming Mode
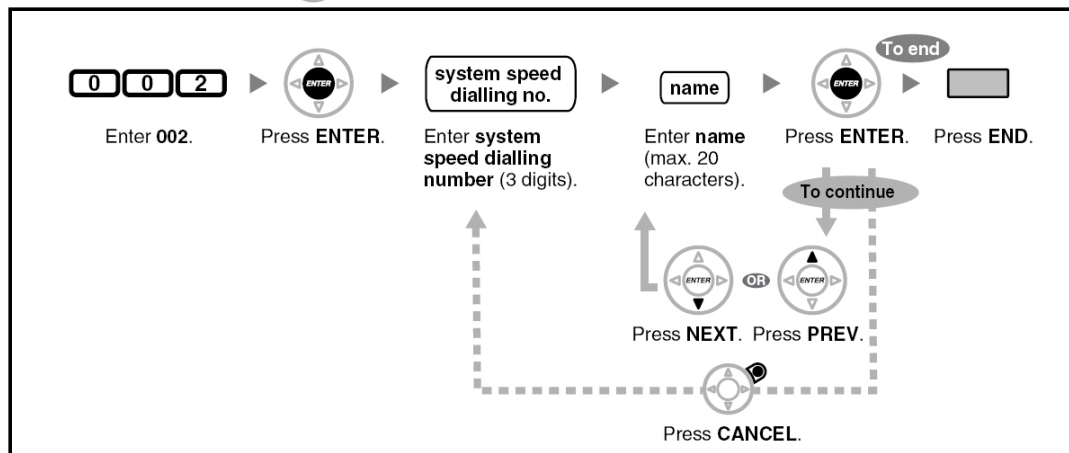
PROG.
PROGRAM

OR

PAUSE

Press **PROGRAM** or **PAUSE**.

✳ ✳   Enter ✳✳.

system password (DEFAULT 1234)

Enter **system password**.

Step 2 - Program the telephone number to be stored

0 0 1   Enter **001**.

ENTER   Press **ENTER**.

system speed dialling no.   Enter **system speed dialling number** (3 digits).

9+
∨
phone no.   Enter **phone number** (max. 32 digits).

ENTER   Press **ENTER**.

To end   Press **END**.

To continue

ENTER   OR   ENTER

Press **NEXT**. Press **PREV**.
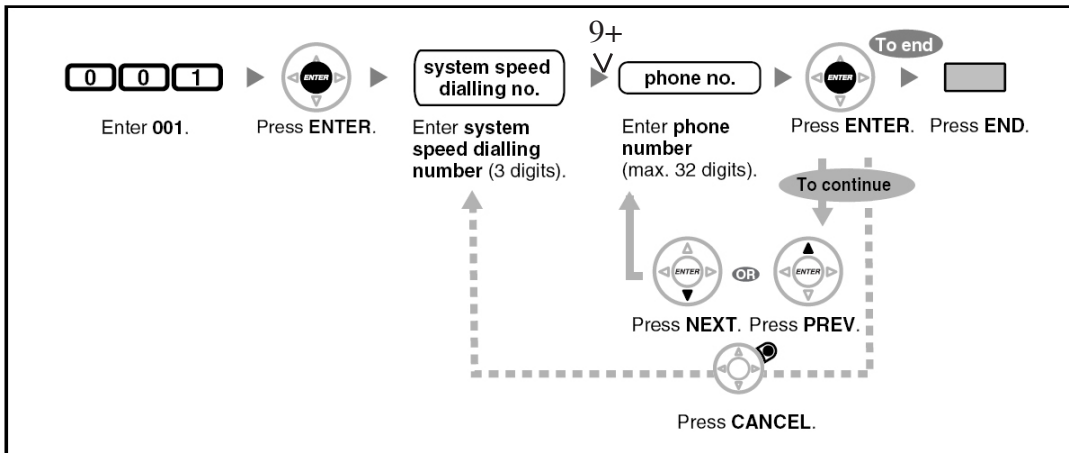
Press **CANCEL**.

Step 3 - Press "Cancel" untill the screen displays (Sys-Pgm No?->)

0 0 2   Enter **002**.

ENTER   Press **ENTER**.

system speed dialling no.   Enter **system speed dialling number** (3 digits).

name   Enter **name** (max. 20 characters).

ENTER   Press **ENTER**.

To end   Press **END**.

To continue

ENTER   OR   ENTER

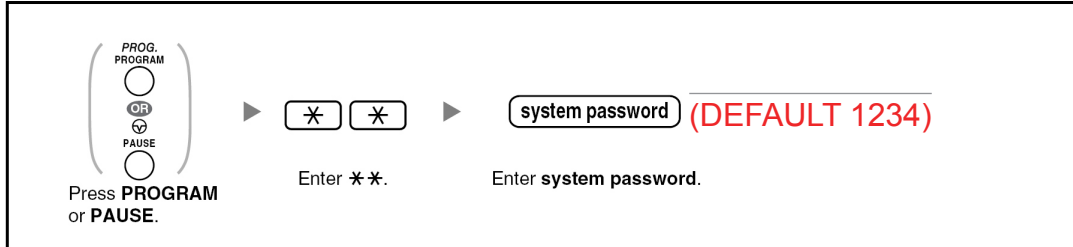Press **NEXT**. Press **PREV**.

Press **CANCEL**.

Step 3 - Exit Programming (Lift Phone Handset and Hangup)

Extension Name Change

(With the handset down and the phone idle)

Step 1 - Enter Programming Mode

PROG.
PROGRAM
OR
PAUSE
Press **PROGRAM** or **PAUSE**.

▶

[✱] [✱]
Enter ✱✱.

▶

[system password] (DEFAULT 1234)
Enter **system password**.

Step 2

[0] [0] [4]
Enter **004**.

▶

ENTER
Press **ENTER**.

▶

[extension no.]
Enter **extension number**.

▶

[name]
Enter **name** (max. 20 characters).

▶

ENTER **To end**
Press **ENTER**.

▶

Press **END**.

To continue

ENTER **OR** **ENTER**
Press **NEXT**. Press **PREV**.

Press **CANCEL**.

Step 3 - Exit Programming (Lift Phone Handset and Hangup)